


Assembly instructions

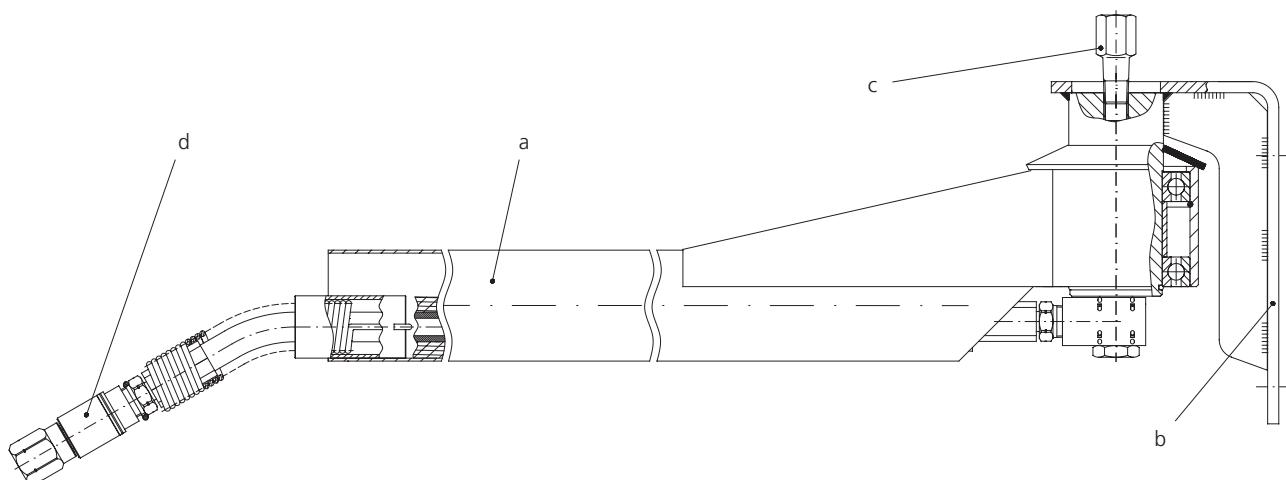


1. *Install the wall boom (a) with the mounting plate (b) to the concrete wall or to the steel beam.*
Attention: -bearable hole load (e.g.: bolt M12) at least 30'000N
2. *Tightly fasten the high pressure hose or the high pressure pipe connection coming from the high pressure pump, directly to the adapter (c).*
3. *Tightly fasten the high pressure hose with lance or brush to the swivel (d).*




For your own safety

- *Read all instructions before the initial operation. Check their proper condition and that they operate safely.*
- *Our products should only be installed by experienced users of high pressure equipment*
- *Always use protection gear when using products connected to high pressure.*
- *Never direct any high pressure water-jet at humans, animals or electric installations.*
- *Before any maintenance or nozzle-change, turn off the high pressure water supply, e.g.: turn off and secure the power switch.*
- *Safety regulations and guidelines (Accident Prevention Rules) from the manufacturer of your high pressure cleaner are applicable.*
- *Nozzle installation according to Nozzle manufacturer.*
- *No modifications to the unit are permitted.*


Application Concept

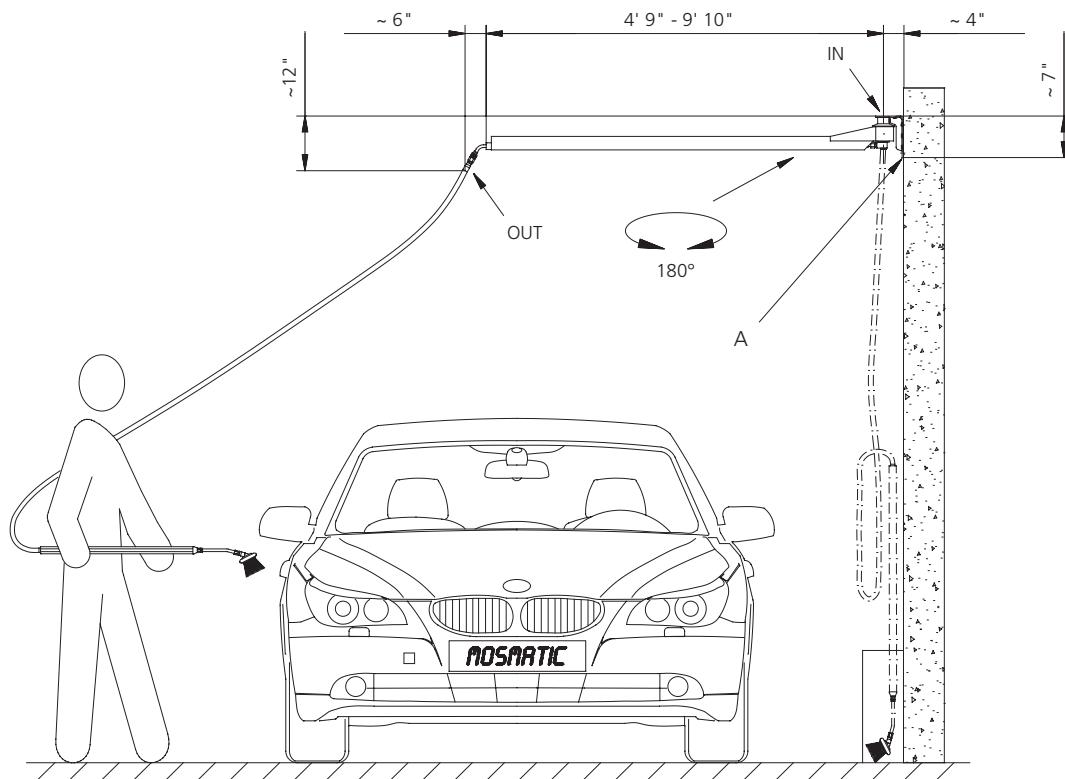

A

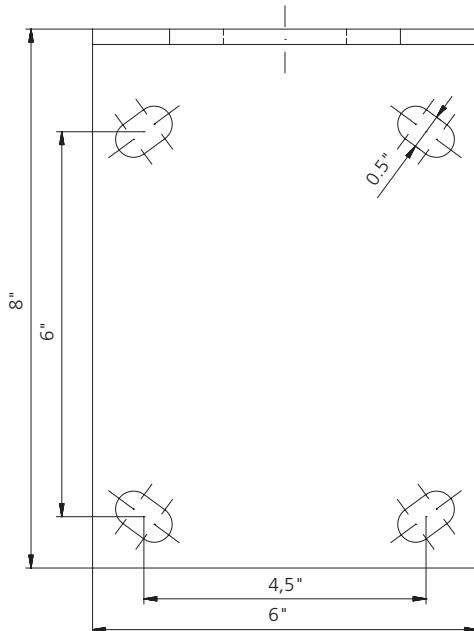


Top View

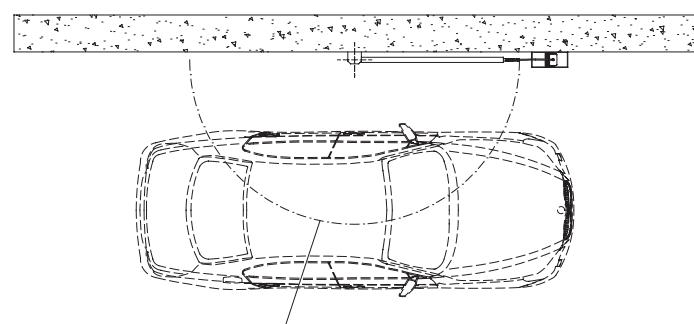

Boom swing range (changes depending on boom size)

Mounting plate (A)
Thickness: 5/16"
bearable hole load: min. 30'000N (e.g.: bolt M12)
• other versions and sizes upon request

⚠ We recommend checking swivel-connections once
a year for normal wear and tear.
No greasing required

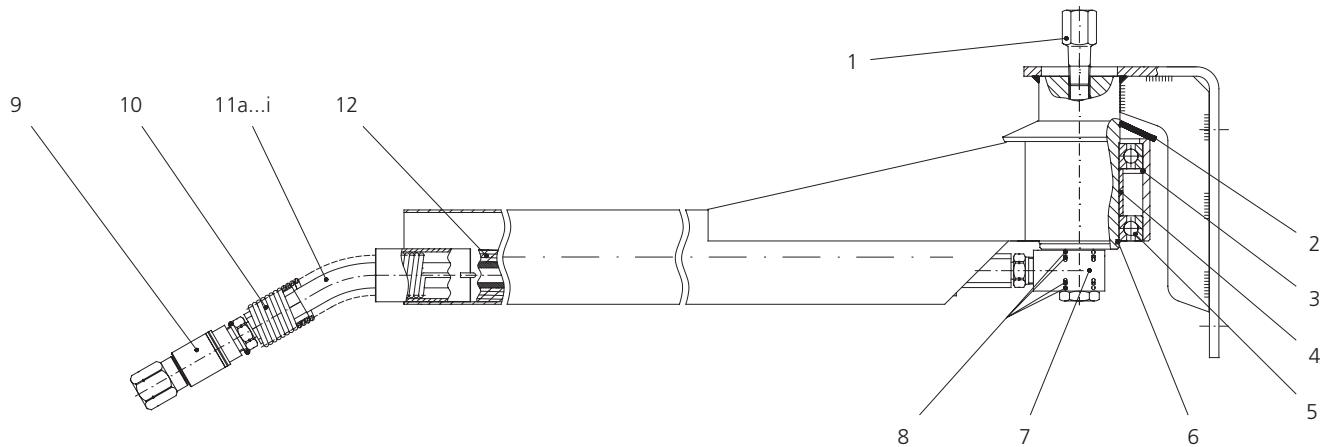Spare parts List**Pos. Part No. Description**

| | | |
|-----|---------|---------------------------------|
| 1 | 51.129 | Adapter (G1/4" kM) - 3/8"NPT-F |
| 2 | 37940 | Rubber Cone |
| 3 | 38155 | Retaining Ring for Bore |
| 4 | 37569 | Spacer |
| 5 | 12295 | Ball Bearings |
| 6 | 37840 | Retaining Ring for Shaft |
| 7 | 40.019 | Swivel - 90° |
| 8 | 40.502 | Seal-Kit for Swivel - 90° (*) |
| 9 | 30.654 | Swivel (3/8" NPT-F) - 3/8"NPT-F |
| 10 | 901.858 | Spring for Boom |
| 11a | 901.860 | HP-Hose for Arm L = 4' 9" |
| 11b | 901.862 | HP-Hose for Arm L = 5' 3" |
| 11c | 901.864 | HP-Hose for Arm L = 5' 9" |
| 11d | 901.865 | HP-Hose for Arm L = 6' 3" |
| 11e | 901.866 | HP-Hose for Arm L = 6' 9" |
| 11f | 901.867 | HP-Hose for Arm L = 7' 5" |
| 11g | 901.868 | HP-Hose for Arm L = 8' 2" |
| 11h | 901.869 | HP-Hose for Arm L = 9' |
| 11i | 901.870 | HP-Hose for Arm L = 9' 10" |
| 12 | 900.275 | Insulation Hose, black |

* Exchange with Seal-Service-Set V-1346
(please ordered separately)